


## How to update Runtime and Date

In this section we will introduce how to update or change the HMI runtime and date. If the HMI time is set via drive, we advise you to use universal time. We will also show in this document how to change the region.

Below is an image of how to enter the runtime and date settings

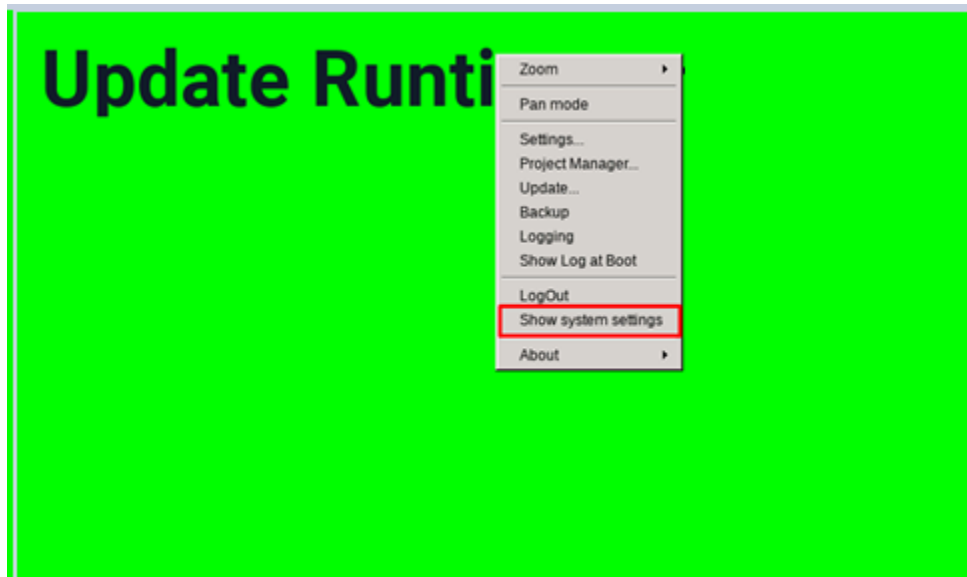

Below is an image of the current configuration, with date and runtime.

MENU Date & Time EDIT ADMIN

Current Timezone	US/Central (-0600)
Current Date	Wednesday, March 3, 2021
Local Time	1:26 PM
Automatic Update (NTP)	Manual

Updated day, region and runtime, as shown below

SAVE ✓ CANCEL ✕

Current Timezone	<span style="border: 1px solid red; padding: 2px;">Universal</span>
Current Date	<span style="border: 1px solid red; padding: 2px;">23-March-2022</span>
Local Time	<span style="border: 1px solid red; padding: 2px;">03 : 14</span>
Automatic Update (NTP)	<input type="checkbox"/>

After the changes, click save, the image below will appear.

